

























IMAGERS

Gold, Silver, Bronze, Traditional, & Check 21+

| Manufacturer | | Model | CR-10001 | RDM 5003/5004/6003/ 6004/60141 | Magtek MICR- image (P/N 22410006 for dial upload & P/N 22410004 for IP upload) | Magtek Excella (Doubled sided imager) | Magtek STX (Double sided imager) | RDM eC70001 series (Double sided imager) |
|--|---|---|----------|--------------------------------------|--|--|-------------------------------------|--|
|  |  | IVI Check Manager3000 | | | | | | |
| |  | AQUA, i5100, i7780 | | * | * | | | |
|  |  | Nurit 2080 | | | | | | |
| |  | Nurit 2060,2085, 3000,3020, 8320 | | * | 4 | | | * |
| |  | Nurit 2090, 3010, 8000, 8400, (dial up & IP only) | | * | 4 | | | * |
| |  | Valupak 700, 720, w/built in welch allyn reader | | | | | | |
|  | | PC Charge (Dial Up Only) | | | | | | |
| |  | Omni 3200, 3200SE, 3210 | | * | | | | * |
| |  | Omni 3730LE, Vx510LE | * | * | 4 | | | * |
| |  | Omni 3730, Vx510, Vx570 | * | * | 4 | | | * |
| |  | Omni 3300, 3740, 3750 | * | * | 4 | | | * |
|  |  | T7E (T7E requires a ext. printer) | | * | | | | * |
| |  | T77, T7P, T7-Plus | | * | | | | * |
| |  | ICE 5500 | | * | | | | * |
| |  | ICE 5700 | | | | | | |
| |  | T4100, T4200 | | * | * | | | * |

IMAGERS

| Gold, Silver, Bronze, Traditional, & Check 21+ | | | | | | | | |
|---|---|----------------------|----------|--------------------------------------|--|--|-------------------------------------|--|
| Manufacturer | | Model | CR-10001 | RDM 5003/5004/6003/ 6004/60141 | Magtek MICR- image (P/N 22410006 for dial upload & P/N 22410004 for IP upload) | Magtek Excella (Doubled sided imager) | Magtek STX (Double sided imager) | RDM eC70001 series (Double sided imager) |
|  |  | Talento | | * | | | | * |
|  |  | RDM Synergy I | | | | | | |
| | | RDM Synergy II | | | | | | |
|  |  | 4Access Orion | | | | | | |
|  |  | Mobilescape 5000 | | | | | | |
|  |  | Axalto Magic 6100 | | * | | | | * |
|  |  | Prime Trex IP | | * | | | | * |

| Bronze & Traditional Only | | | | | | | | |
|--|---|--|--|--|--|--|--|--|
|  |  | LinkPoint 2000, 3000/AIO | | | | | | |
|  |  | Zon Jr, XL 300, Tranz 330, T380 | | | | | | |
| |  | Tranz 380x2 | | | | | | |
| |  | Tranz 420, Tranz 460 | | | | | | |
|  |  | 8020 (supports dial- up only on checks) | | | | | | |
|  |  | Comstar 3010 | | | | | | |
| |  | Comstar 8000 | | | | | | |
|  | | EncomPOS Software | | | | | | |

1= Check reader support available w/ "standalone" check service only. If using both credit and check on the terminal, MICR information must be manually entered.

2 = Full MICR program available w/ Check Only Service on 2nd side of terminal, otherwise refer to rule 1.

3 - Supported only in certain applications. Please call Technical Support for details.

4 = Configuration checks are required for this check reader/imager.

5= This reader must be mailed into Technical Support to be configured.

6 = Requires USB keyboard emulator & keyboard wedge (USB/Wedge)

























Be advised that we are unable to incorporate our Value Added Services into certain Class A applications/Processors

(Please feel free to call our technical support at 1.877.438.3249 for details/limitations)

CHECK READERS

| Gold, Silver, Bronze, Traditional, & Check 21+ | | | | | | | | |
|---|---|---|-------------|--------|-------|-----------------|------------------|------------------------|
| Manufacturer | | Model | Welch Allyn | CRM431 | CR600 | Ingenico eN2500 | Magtek Mini MICR | Magtek Mini/Mag-stripe |
|  |  | IVI Check Manager3000 | | | | | | |
| |  | AQUA, i5100, i7780 | | | | * | * | |
|  |  | Nurit 2080 | 4 | 4 | | 5 | 4 | |
| |  | 2060, 2085, 3000, 3020, 8320 | 4 | 4 | | 5 | 4 | |
| |  | Nurit 2090, 3010, 8000, 8400, (dial up & IP only) | 4 | 4 | | 5 | 4 | |
| |  | Valupak 700, 720, w/built in welch allyn reader | 4 | | | | | |
|  | | PC Charge (Dial Up Only) | | | | | 4 | 4 |
| |  | Omni 3200, 3200SE, 3210 | | 4 | 4 | 5 | 4 | |
| |  | Omni 3730LE, Vx510LE | | 4 | 4 | 5 | 4 | |
| |  | Omni 3730, Vx510, Vx570 | | 4 | 4 | 5 | 4 | |
| |  | Omni 3300, 3740, 3750 | | 4 | 4 | 5 | 4 | |
|  |  | T7E (T7E requires a ext. printer) | | 4 | 4 | 5 | 4 | |
| |  | T77, T7P, T7-Plus | | 4 | 4 | 5 | 4 | |
| |  | ICE 5500 | | 4 | 4 | 5 | 4 | |
| |  | ICE 5700 | | | | | | |
| |  | T4100, T4200 Series | | 4 | 4 | 5 | 4 | |

CHECK READERS

| Gold, Silver, Bronze, Traditional, & Check 21+ | | | | | | | | |
|---|---|--|-------------|--------|-------|-----------------|------------------|------------------------|
| Manufacturer | | Model | Welch Allyn | CRM431 | CR600 | Ingenico eN2500 | Magtek Mini MICR | Magtek Mini/Mag-stripe |
|  |  | Talento | | 4 | 4 | 5 | 4 | |
|  |  | RDM Synergy I | | | | | | |
| | | RDM Synergy II | | | | | | |
|  |  | 4Access Orion | | | | | | |
|  |  | Mobilescape 5000 | | | | | | |
|  |  | Axalto Magic 6100 | | | | | 4 | |
|  |  | Prime Trex IP | | | | | * | |
| Bronze & Traditional Only | | | | | | | | |
|  |  | LinkPoint 2000, 3000/AIO | | | | | | |
|  |  | Zon Jr, XL 300, Tranz 330, T380 | | 1 | 1 | 1 | 1 | |
| |  | Tranz 380x2 | | 2 | 2 | 2 | 2 | |
| |  | Tranz 420, Tranz 460 | | 1 | 1 | 1 | 1 | |
|  |  | 8020 (supports dial-up only on checks) | | | | | | |
|  |  | Comstar 3010 | | | | | | |
| |  | Comstar 8000 | | | | | | |
|  | | EncomPOS Software | | | * | | | |

1= Check reader support available w/ "standalone" check service only. If using both credit and check on the terminal, MICR information must be manually entered.

2 = Full MICR program available w/ Check Only Service on 2nd side of terminal, otherwise refer to rule 1.

3 - Supported only in certain applications. Please call Technical Support for details.

4 = Configuration checks are required for this check reader/imager.

5= This reader must be mailed into Technical Support to be configured.

6 = Requires USB keyboard emulator & keyboard wedge (USB/Wedge)

Be advised that we are unable to incorporate our Value Added Services into certain Class A applications/Processors

(Please feel free to call our technical support at 1.877.438.3249 for details/limitations)









PRINTERS

Gold, Silver, Bronze, Traditional, & Check 21+

| Manufacturer | | Model | P250/P900 | Scribe 612 | Citizen IDP 560/562 |
|---|---|--|-----------|------------|---------------------|
|  |  | IVI Check Manager3000 | * | * | * |
| |  | AQUA, i5100, i7780 | | | |
|  |  | Nurit 2080 | * | * | * |
| |  | Nurit 2060,2085, 3000,3020, 8320 | | | |
| |  | Nurit 2090, 3010, 8000, 8400, <i>(dial up & IP only)</i> | | | |
| |  | Valupak 700, 720, <i>w/built in welch allyn reader</i> | | | |
|  | | PC Charge <i>(Dial Up Only)</i> | | | |
| |  | Omni 3200, 3200SE, 3210 | | | |
| |  | Omni 3730LE, Vx510LE | | | |
| |  | Omni 3730, Vx510, Vx570 | | | |
| |  | Omni 3300, 3740, 3750 | | | |
|  |  | T7E <i>(T7E requires a ext. printer)</i> | * | | * |
| |  | T77, T7P, T7-Plus | | | |
| |  | ICE 5500 | | | |
| |  | ICE 5700 | | | |

PRINTERS

| Gold, Silver, Bronze, Traditional, & Check 21+ | | | | | |
|---|---|-------------------|-----------|------------|---------------------|
| Manufacturer | | Model | P250/P900 | Scribe 612 | Citizen IDP 560/562 |
|  |  | Talento | | | |
|  |  | RDM Synergy I | | | |
| | | RDM Synergy II | | | |
|  |  | 4Access Orion | | | |
|  |  | Mobilescape 5000 | | | |
|  |  | Axalto Magic 6100 | | | |
|  |  | Prime Trex IP | | | |

| Bronze & Traditional Only | | | | | |
|---|---|--|---|---|---|
|  |  | LinkPoint 2000, 3000/AIO | * | * | * |
|  |  | Zon Jr, XL 300, Tranz 330, T380 | | | |
| |  | Tranz 380x2 | | | |
| |  | Tranz 420, Tranz 460 | | | |
|  |  | 8020 (supports dial-up only on checks) | | | |
|  |  | Comstar 3010 | | | |
| |  | Comstar 8000 | | | |
|  | | EncomPOS Software | | | |

1= Check reader support available w/ "standalone" check service only. If using both credit & check on the terminal, MICR info must be manually entered.

2 = Full MICR program available w/ Check Only Service on 2nd side of terminal, otherwise refer to rule 1.

3 - Supported only in certain applications. Please call Technical Support for details.

































4 = Configuration checks are required for this check reader/imager.














5= This reader must be mailed into Technical Support to be configured.

6 = Requires USB keyboard emulator & keyboard wedge (USB/Wedge)

Be advised that we are unable to incorporate our Value Added Services into certain Class A applications/Processors

(Please feel free to call our technical support at 1.877.438.3249 for details/limitations)

| Gold, Silver, Bronze, Traditional, & Check 21+ | | | | | | | | | | | |
|---|---|---|------------------------|--|---------------------|------------------|---|--|---|------------------------|--|
| Manufacturer | Model | All-in-one/Stand-alone Solution | Multi-merchant capable | Check 21+ support (see double sided imagers) | IP/Ethernet support | Wireless support | Integrated download file (GETI must build for all processors) | Independent download file (GETI builds check only) | DL Swipe support (When magstrip is present) | GETI Gift Card Support | Important Notes |
|  |  | IVI Check Manager 3000 | * | | | | | * | | | Unit Must have OS version 2.8 or higher and requires printer for Gold/Silver (cannot use built in printer from another terminal)... |
| |  | AQUA, i5100, i7780 | | * | | * | | * | * | | IP image uploads not available at this time...Bronze/traditional service req manula batch "clear" for porper reporting...No eC5000 support |
|  |  | Nurit 2080 | | * | | | * | | * | * | Possible memory limitations may exist... |
| |  | 2060, 2085, 3000, 3020, 8320 | | * | | | * | | * | * | Conflicts between applications/protocols could cause support issues... |
| |  | Nurit 2090, 3010, 8000, 8400, (dial up & IP only) | | * | | * | * | | * | * | Docking station required to connect check reader/imager to Nurit 8000... |
| |  | Valupak 700, 720, w/built in welch allyn reader | * | * | | | * | | * | * | |
|  | | PC Charge (Dial Up Only) | | | | | | | * | | Keyboard wedge or USB Reader's only (PIN's 22520001, 22520020, 22530001, 22530005, 2253003, 22533001, 22533003)... |
| |  | Omni 3200, 3200SE, 3210 | | | | | * | * | * | | 3200 is slow to operate within the bankcard app...Known memory issue with RBS Lynk Softpay Bankcard... |
| |  | Omni 3730LE, Vx510LE | * | | | * | * | * | * | * | Single application terminals and WILL NOT support credit, debit, gift, etc...with the check download... |
| |  | Omni 3730, Vx510, Vx570 | | | | * | * | * | * | * | 3730 and Vx510 will not support more than TWO applications...works w bankcard & check, OR check & gift ONLY... |
| |  | Omni 3300, 3740, 3750 | | | | * | * | * | * | * | Requires at least 6 Meg of memory for multiple add value applications... |
|  |  | T7E (T7E requires a ext. printer) | | | | | * | | | | **ALL Hypercom's MUST be on FDR (Omaha), TSYS (VITAL) Global (NDC), Paymentech, Nova, or FDMS (Nashville)** |
| |  | T77, T7P, T7-Plus | | * | | | * | | | | 512K required for T7 (1 meg for multi-merchant)...T77-G(?) models not supported by GETI's version of SPOS... |
| |  | ICE 5500 | | * | | | * | | | | |
| |  | ICE 5700 | * | * | | | * | | | | 1 meg required for ICE (1.5 meg for multi-merchant)... |
| |  | T4100, T4200 Series | | * | | * | * | | | * | Upload handled via Terminal (use "no modem" model imagers to lower cost)... |
|  |  | Talento | | * | | | * | 3 | | | GETI Cannot build the credit load for Talento Terminals... |
|  |  | RDM Synergy I | * | * | | | * | * | * | | |
| |  | RDM Synergy II | * | * | | | * | * | * | | |
|  |  | 4Access Orion | * | * | * | * | * | * | * | * | |
|  |  | Mobilescape 5000 | * | | | | * | | * | | Support is handled by Commerçant |
|  |  | Axalto Magic 6100 | | | | | | | | | Support is handled by EMS... |
|  |  | Prime Trex IP | | * | | * | | * | * | | Auto-Close does not work properly in Multi-App mode...No eC5000 Support... |

| Bronze & Traditional Only | | | | | | | | | | | |
|---|---|--|--|---|--|---|---|---|---|--|---|
|  |  | LinkPoint 2000, 3000/AIO | | | | | * | | | | FDR Only, and no reader capability on the Linkpoints... |
|  |  | Zon Jr, XL 300, Tranz 330, T380 | | | | | | * | | | See notes below... |
| |  | Tranz 380x2 | | * | | | | * | | | Multi-Merchant limited to 2 (with both sides loaded for checks only)... |
| |  | Tranz 420, Tranz 460 | | | | | | * | | | See notes below... |
|  |  | 8020 (supports dial-up only on checks) | | * | | | | | | | No reader support on Docking Station for 8020... |
|  |  | Comstar 3010 | | | | | * | | * | | |
| |  | Comstar 8000 | | | | | * | | * | | |
|  |  | EncomPOS Software | | | | * | | | | | Setup and support is handled by EncomPOS... |

1= Check reader support available w/ "standalone" check service only. If using both credit and check on the terminal, MICR information must be manually entered.
2 = Full MICR program available w/ Check Only Service on 2nd side of terminal, otherwise refer to rule 1.
3 - Supported only in certain applications. Please call Technical Support for details.
4 = Configuration checks are required for this check reader/imager.
5 = This reader must be mailed into Technical Support to be configured.
6 = Requires USB keyboard emulator & keyboard wedge (USB/Wedge)
Be advised that we are unable to incorporate our Value Added Services into certain Class A applications/Processors